

Distributed by
Raymarine


Any reference to Raytheon or RTN in this manual should be interpreted as Raymarine. The names Raytheon and RTN are owned by the Raytheon Company.

ST60 Setup & Operation Cue Card


DEPTH


Introduction

This cue card provides an illustrated quick reference guide to the operation and calibration features of the ST60 Depth instrument. Unless stated otherwise, all key presses are momentary.

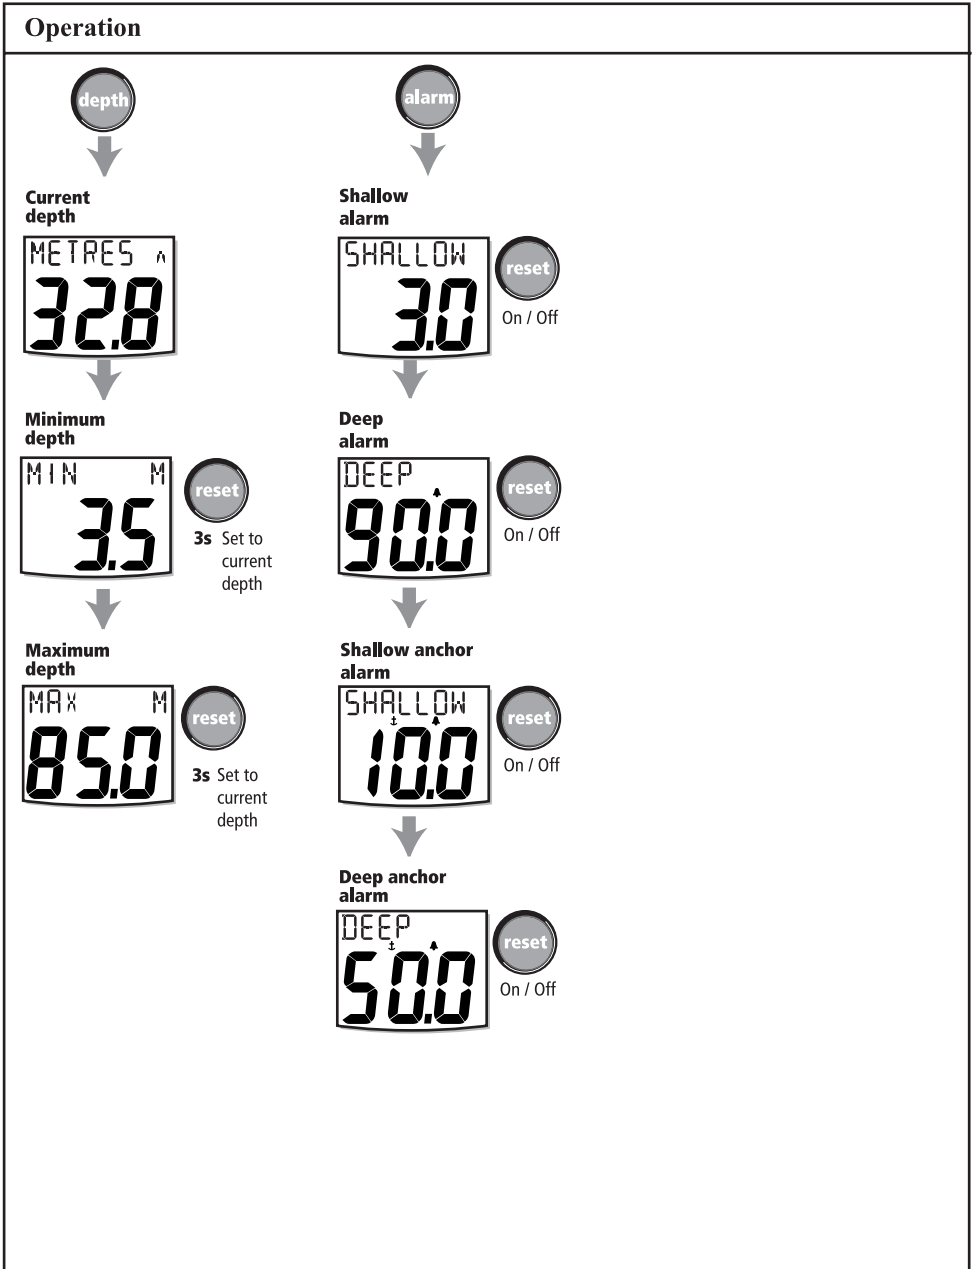



Illumination


Enter Illumination Mode
 Hold down for 1 second

Adjust
 Press repeatedly to cycle through settings






Alarms

Switch On / Off
 Hold down for 1 second

Enter and Exit Adjust Mode
 Momentary while Alarm Value is displayed

Adjust
 ^ Increase Value v Decrease Value

Calibration

| | | |
|--|---|--|
| <p>User Calibration Depth Units Depth Offset Lock shallow alarm Pop-up pilot (On/Off)</p> <p>User Calibration Mode  2 seconds</p> | <p>Intermediate Calibration Software Version Master/Repeater selection (Manual Setting)</p> <p>Intermediate Calibration Mode  4 seconds</p> | <p>Dealer Calibration User Calibration (On/Off) Depth response (fast/slow) Boatshow Mode (On/Off) Factory Defaults (On/Off)</p> <p>Dealer Calibration Mode  then  12 seconds</p> |
| <p>Exit Calibration Mode and Save Changes  2 seconds</p> | | |